

Canon

PowerShot S400 DIGITAL ELPH
IXUS 400

Quick Start Guide



ENGLISH



Handling precautions
Camera's detailed operations
→ Camera User Guide

Software operations
→ Software Starter Guide

Detailed software operations
→ ZoomBrowser EX Software User Guide (Windows®)
→ ImageBrowser Software User Guide (Macintosh)
(These PDF format manuals are available on the Canon website. Please download them from the following URL:
<http://www.canon.co.jp/imaging/information-e.html>)

This guide explains the required operations the first time the camera is used, how to download images to a computer, as well as connecting a printer for direct printing. For more information about handling precautions and detailed instructions, please refer to the manuals listed above.

Please refer to the *Troubleshooting* section of the *Software Starter Guide* if you have trouble installing the software or downloading images.

Do not connect the camera to the computer before the software is installed.

CDI-E083-010

XX02XXXX


© 2003 CANON INC.

PRINTED IN JAPAN

Step 1 Preparing the Camera


1. Charge the battery pack. (Battery charger types vary by region.)

Place the battery pack in the battery charger and plug the charger into a power outlet. The charge indicator lights red while charging and changes to green when the battery pack is charged. Charging the battery pack takes approximately 130 minutes.

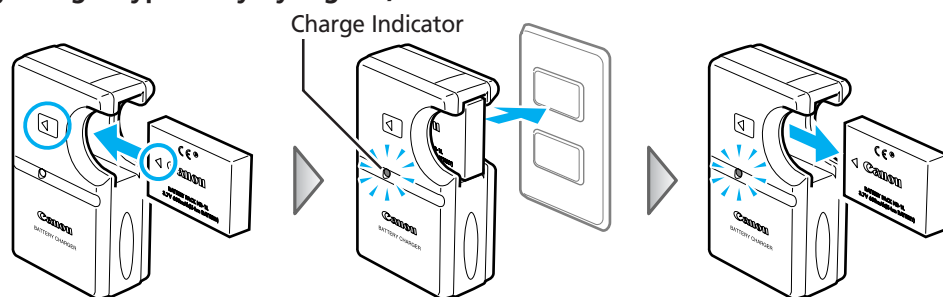


2. Install the battery pack.

Slide the battery cover open. Press the battery lock while inserting the battery pack all the way in, aligning the arrows on the camera and battery pack. Slide the battery cover closed.

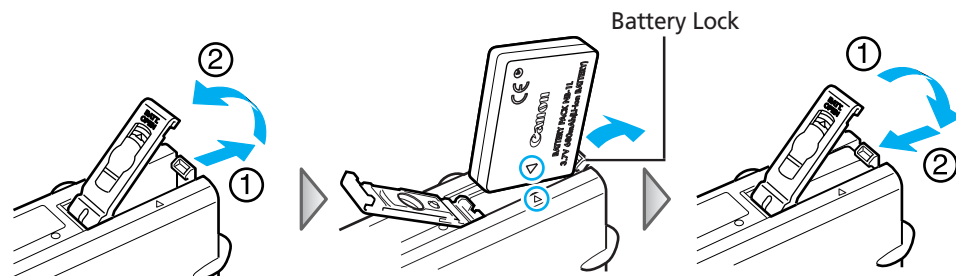

3. Install the CF card.

Slide the lock and open the CF card slot cover. Insert the CF card with its label facing upward until the CF card eject button fully extends. Close the CF card slot cover.

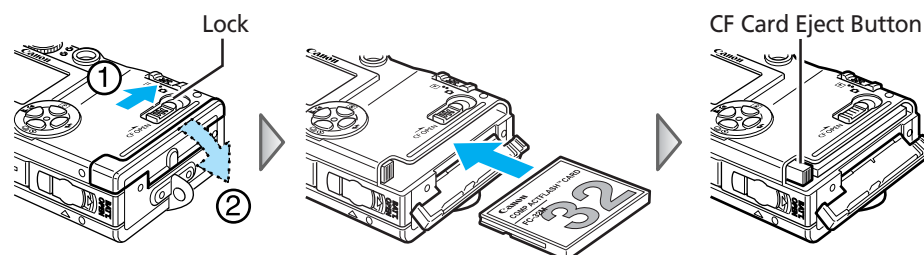

Step 2 Shooting


1. Set the mode switch to (Shooting) and the shooting mode dial to (Auto).

2. Turn on the power.

Press the ON/OFF button until the power lamp lights. The Date/Time menu will appear on the LCD monitor when the camera is first turned on.


3. Set the date and time (First time the camera is powered on).

Use the buttons to select the items you wish to set, and the buttons to change the value. To put the settings into effect, press the **SET** button.

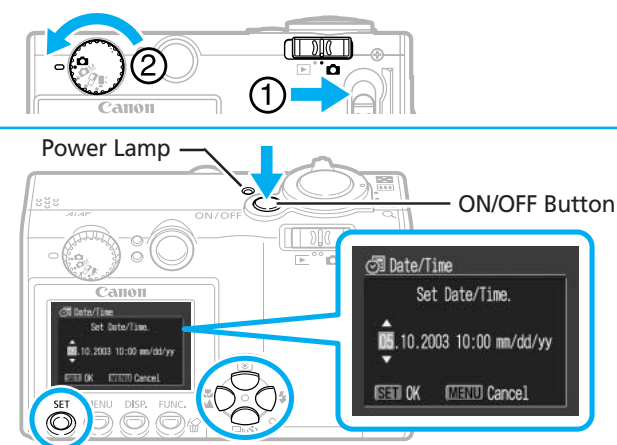


4. Focus.

Point the camera in the direction of the subject you wish to shoot and press the shutter button halfway. The camera beeps twice when the subject is in focus.

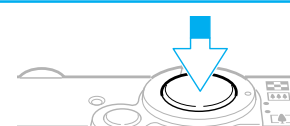


5. Shoot.

Press the shutter button fully. The shutter sound will sound once when the shot has been taken. The recorded image is displayed on the LCD monitor for approximately 2 seconds.

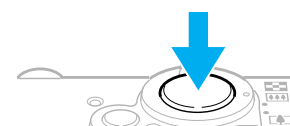

Turn off the power.

Press the ON/OFF button. Even if the ON/OFF button is not pressed, the power will automatically shut down 3 minutes after the last control is accessed.



Step 3 Reviewing an Image


1. Set the mode switch to (Replay).

2. Turn on the power.

Press the ON/OFF button until the power lamp lights. The last recorded image appears in the LCD monitor.


3. View the images.

Use the buttons to display the image you wish to see.

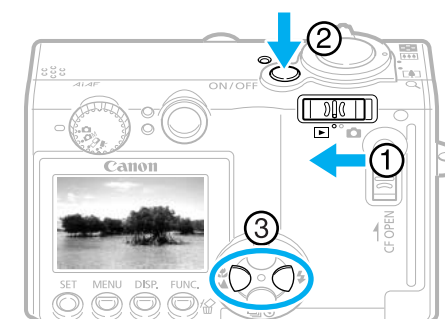


To Delete an Unwanted Image

1. Select the unwanted image with the buttons and press the button.

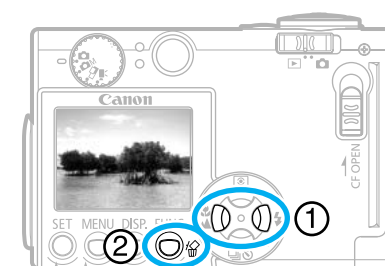

2. When the confirmation screen appears, check that [Erase] is selected and press the **SET** button.

Select [Cancel] with the buttons to cancel without erasing.

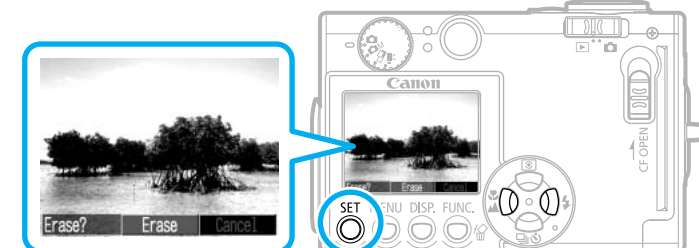

Continued on the reverse side.


Downloading Images to a Computer

Do not connect the camera to the computer before the software is installed. Follow each step below in order.

List of Things to Prepare

- Camera and computer
- Canon Digital Camera Solution Disk provided with the camera
- USB cable (use the cable provided with the camera)

Steps to Follow

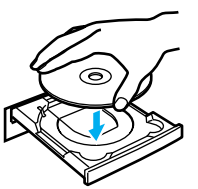


1. Set the Canon Digital Camera Solution Disk in the CD-ROM drive.




2. Install the software from the disk.

For details on software installation, see the *Software Starter Guide* included in your package.

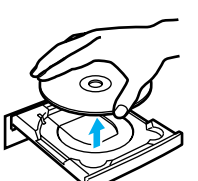

3. After your computer restarts, eject the Solution Disk from the CD-ROM drive.

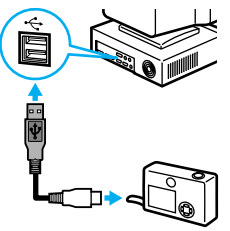


4. Connect the camera to the computer using the USB cable.

Set the camera's mode switch to  and turn on the power.

5. Start the program.


- **Windows*:** The Event dialog will automatically display.

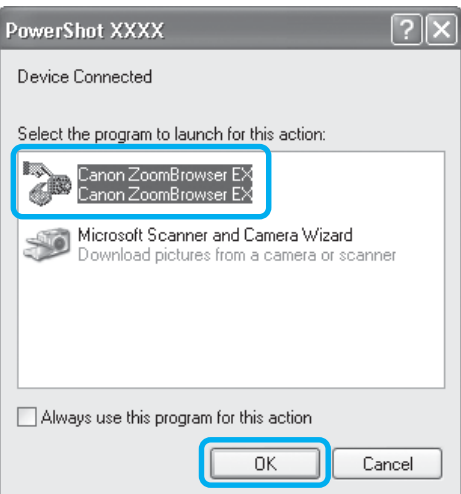

Select [Canon ZoomBrowser EX] and click [OK].

* If the above dialog (Event dialog) does not appear automatically, double-click the [ZoomBrowser EX] icon on the desktop.

- **Mac OS X (10.1/10.2):**
 1. If Image Capture or iPhoto are running, click on  in the upper left corner of the window to close the application.
 2. Double-click the [Canon ImageBrowser] icon on the desktop.
- **Mac OS 9.0-9.2:** ImageBrowser will start and open the ImageBrowser Automation wizard.

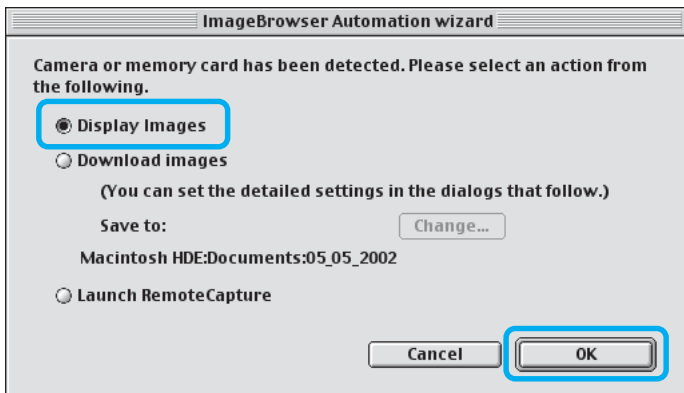

Confirm that [Display Images] is selected and click the [OK] button.

6. Download images to the computer using the program you started.


For details on downloading images, see the *Software Starter Guide* included in your package.

Printing with a Direct Print Compatible Printer (CP Series)

It is easy to print out crisp prints of the images you shoot by connecting your camera directly to a separately sold, direct print compatible printer (CP series) with a cable. For details, please see the user guide for the printer.

You can also print with a separately sold, direct print compatible Bubble Jet printer. For details, please see the user guide included with the Bubble Jet printer.

1. Load the ink cassette and the paper cassette into the printer.

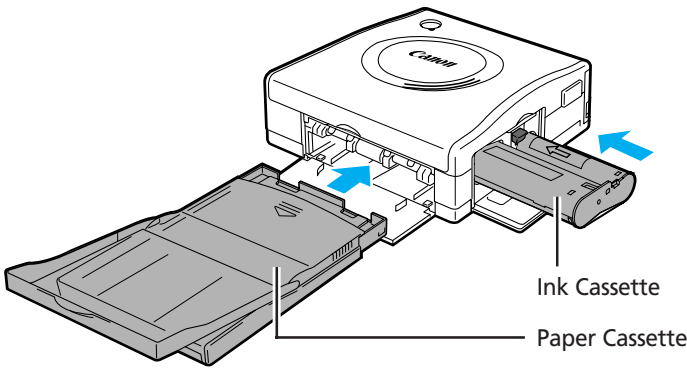


2. Connect the power cord to the printer.

With the CP-10 printer, the printer's power turns on automatically.

3. Connect the camera to the printer and press the printer's ON/OFF button to turn on the power. Set the camera's mode switch to  and turn on the power.

-  appears on the camera's LCD monitor.
- If you cannot use the camera's compact power adapter*, please use a fully charged battery pack.

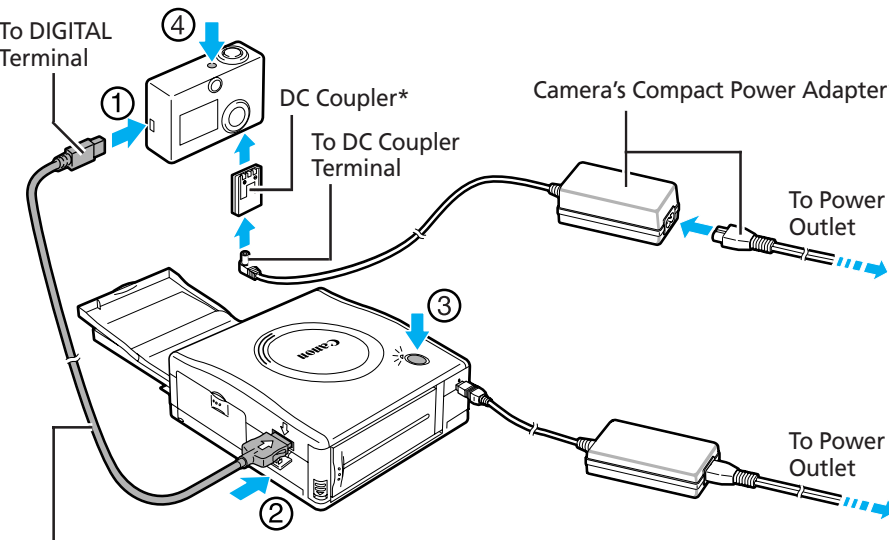

To DIGITAL Terminal

To DC Coupler Terminal

To Power Outlet

To Power Outlet

Direct Interface Cable DIF-100 (Included with the printer)


* Included with the optional AC Adapter Kit ACK500

4. Choose an image using the or button and press the SET button.



5. Choose [Print] using the / / / buttons and press the SET button.

The image will start to print and, when it is completely finished, the display will revert to standard replay mode.

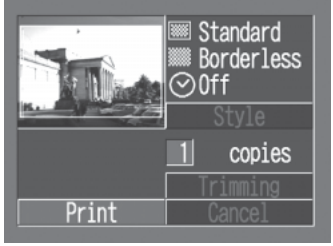

For details on printing images, see the *Camera User Guide* included in your package.